
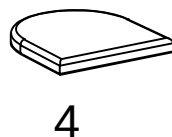
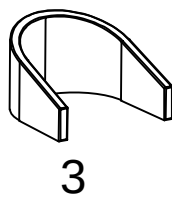
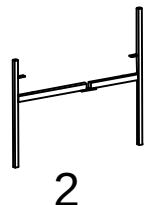






ROVECONCEPTS

SOLANA OUTDOOR DINING CHAIR ASSEMBLY INSTRUCTIONS / INSTRUCTIONS DE MONTAGE


HARDWARE



STEP 1

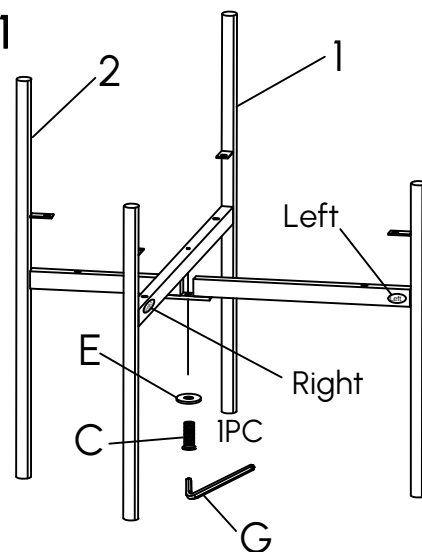


STEP 2

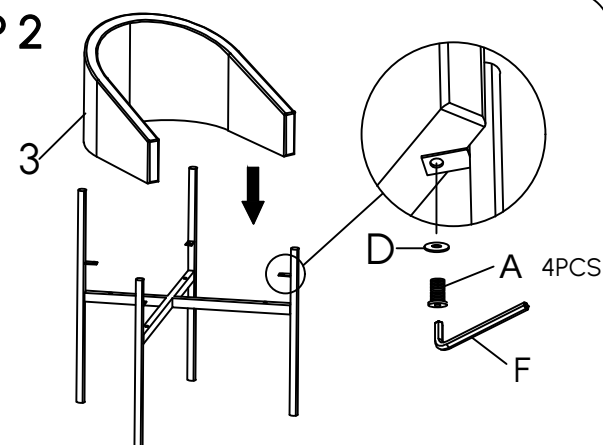


Install the rear two screws first; then the front two screws next.
DO NOT overtighten until all screws is in place.
Installez d'abord les deux vis arrière, puis les deux vis avant. Ne serrez pas excessivement tant que toutes les vis ne sont pas en place.

STEP 3

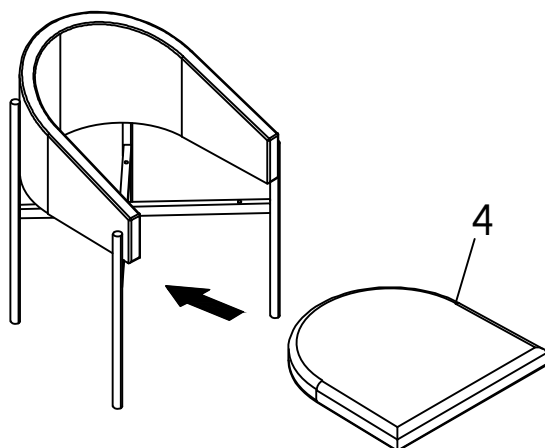

STEP 4

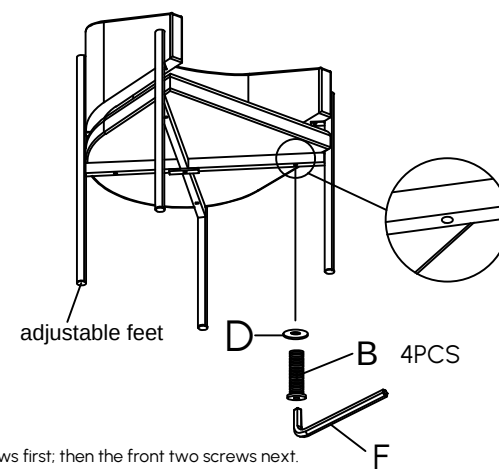

Install the rear two screws first; then the front two screws next.
DO NOT overtighten until all screws is in place.
Installez d'abord les deux vis arrière, puis les deux vis avant. Ne serrez pas excessivement tant que toutes les vis ne sont pas en place.