


HARDWARE | QUINCAILLERIE

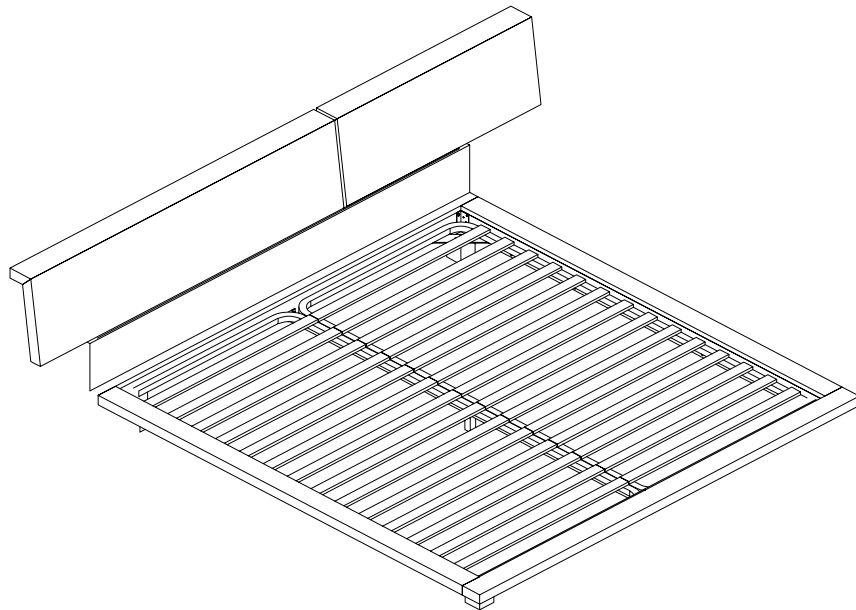

A

x18
Ø10*40



B

x30
M6*20




C

x30
M6




D

x30
M6



E

x7



F

x4




G

x1




H

x2

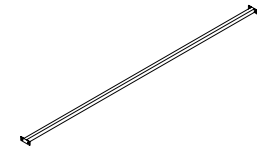

I

x1




K

x1
M4*30*110




L


x14

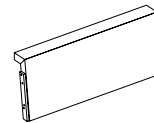


x1

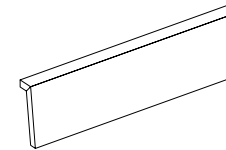


x1

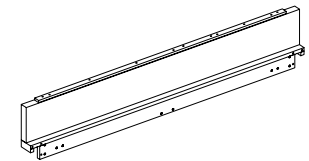

x1

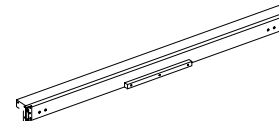

x2

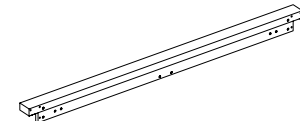


x1


ROVECONCEPTS

HUNTER BED - QUEEN ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE


STEP 1

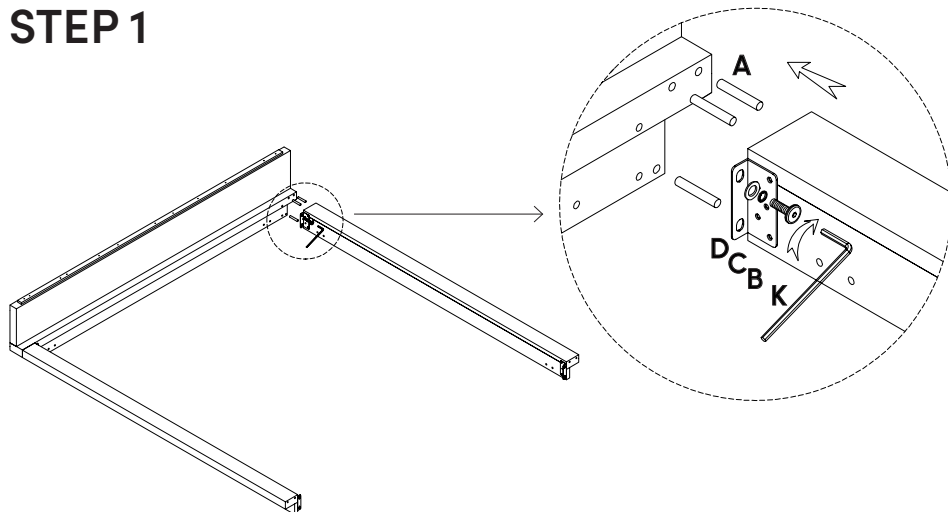


STEP 2

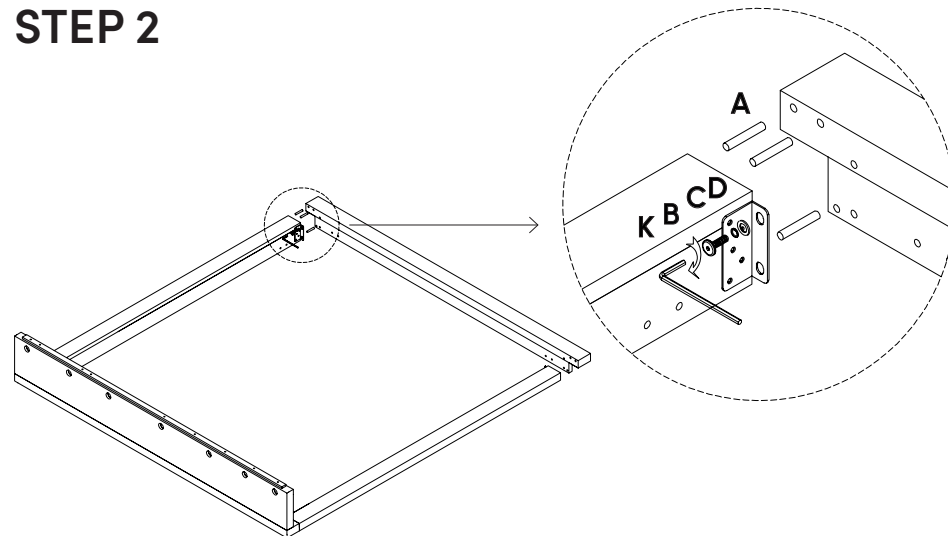

STEP 3

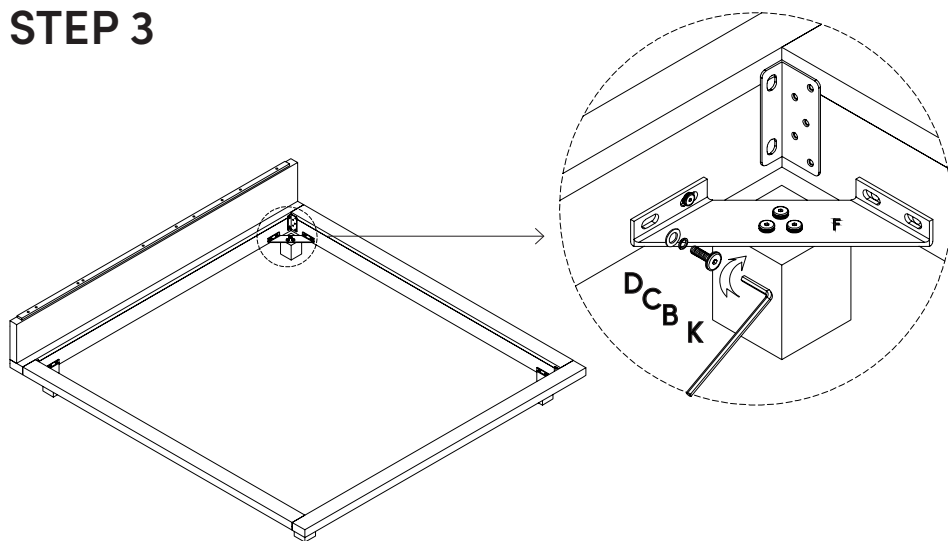


STEP 4

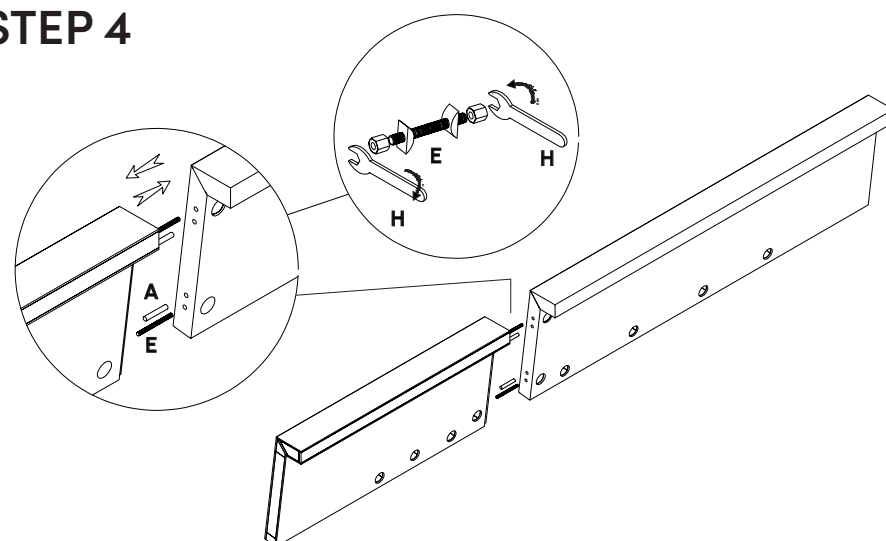


ROVECONCEPTS

HUNTER BED - QUEEN ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE


STEP 5

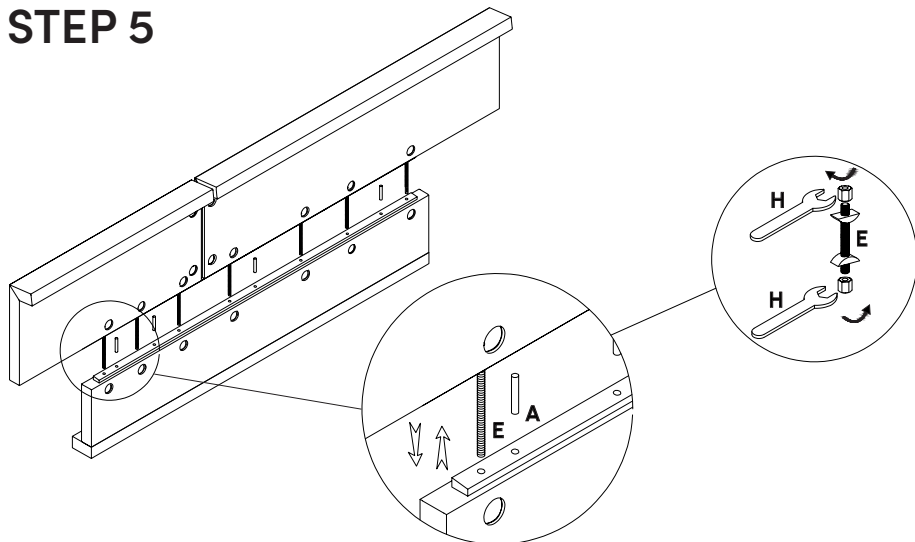


STEP 6

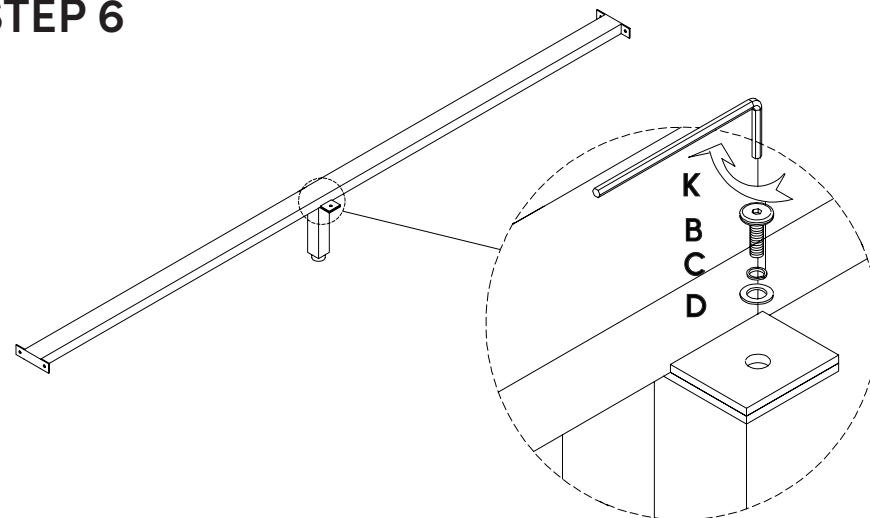

STEP 7

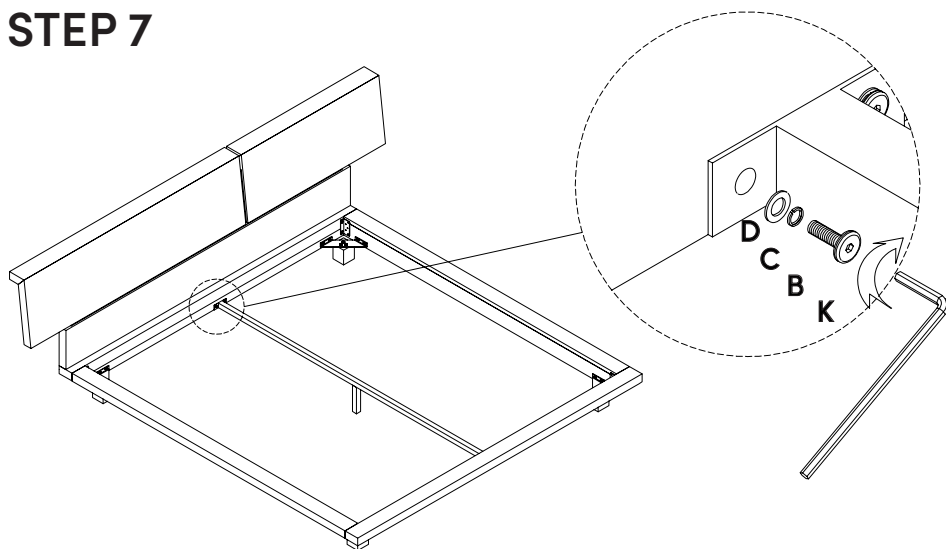


STEP 8

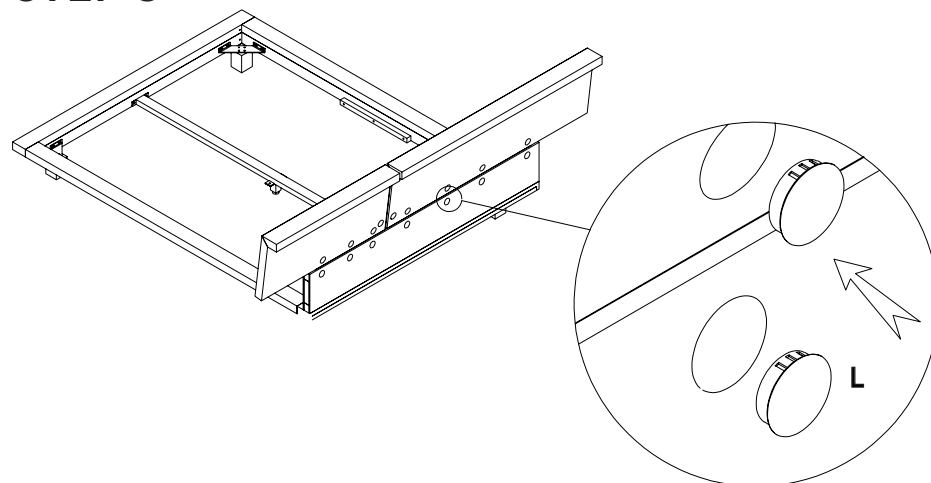


ROVECONCEPTS

HUNTER BED - QUEEN ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE


STEP 9

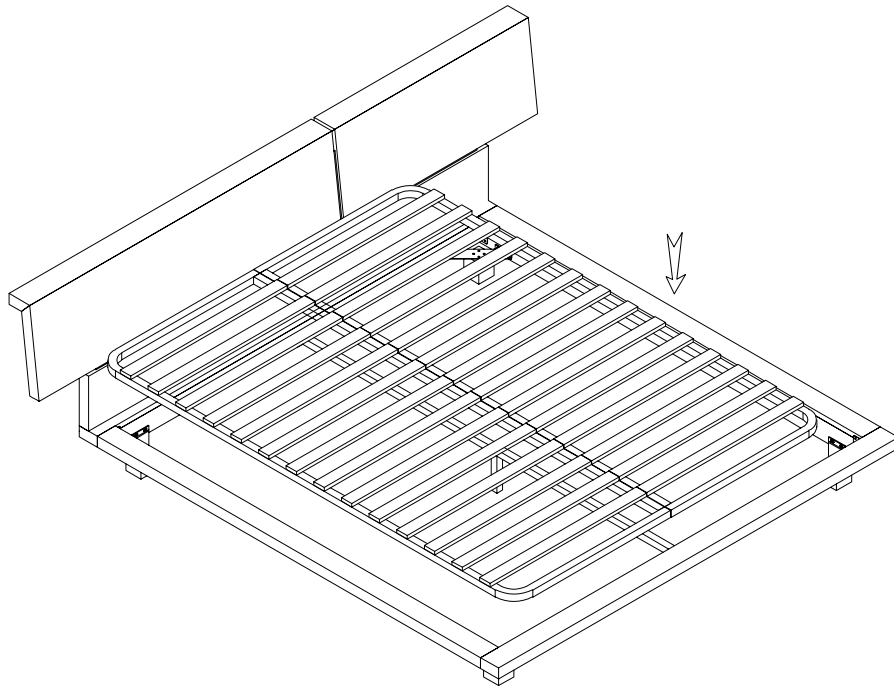

STEP 10

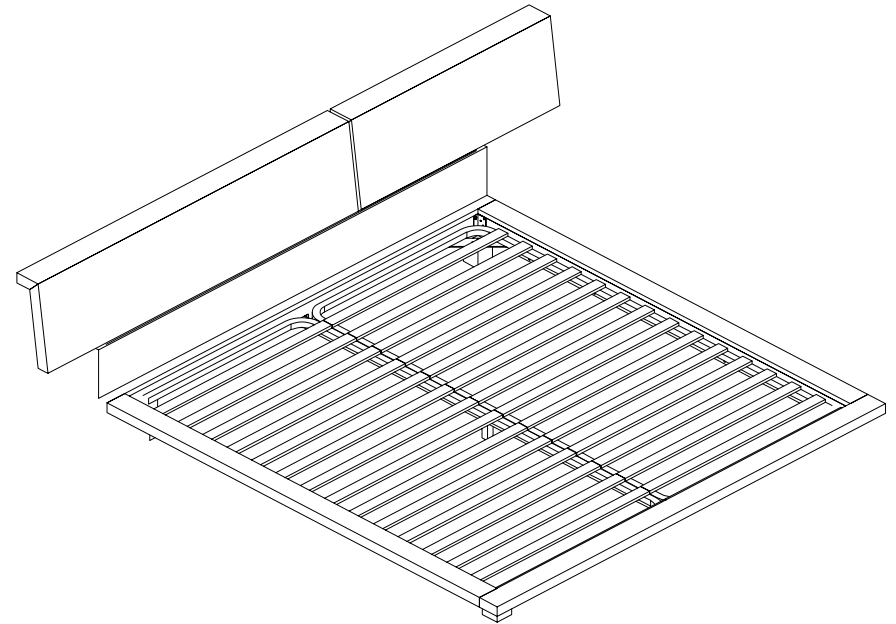

HARDWARE | QUINCAILLERIE

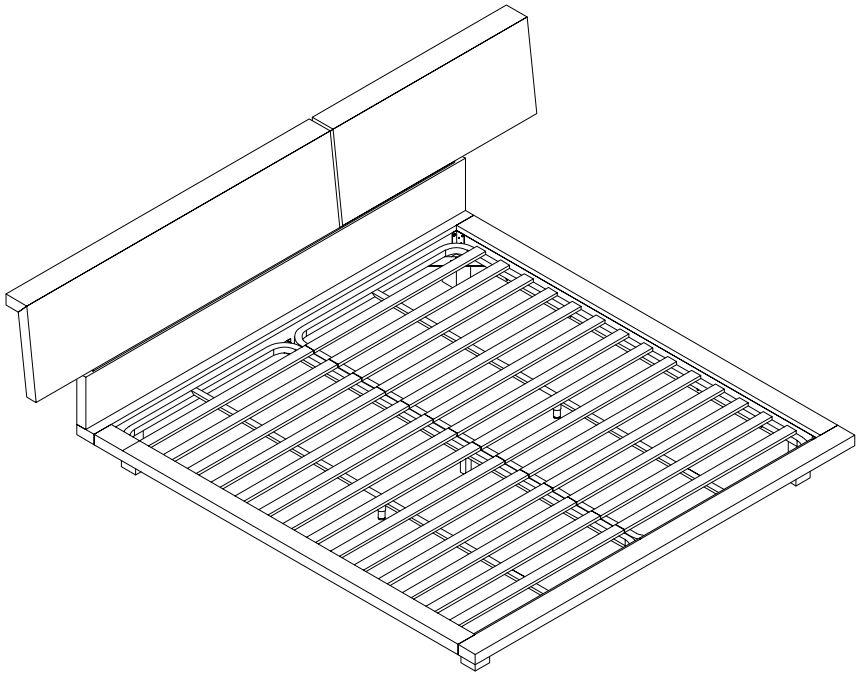

A

x18
Ø10*40



B

x30
M6*20




C

x30
M6




D

x30
M6



E

x9



F

x4




G

x1




H

x2

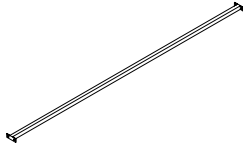

I

x1



K

x1
M4*30*110




L

x18




M


x2

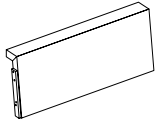


x1

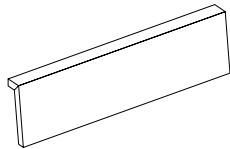


x1

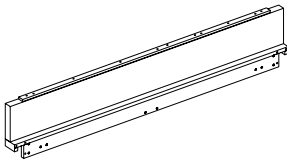

x1

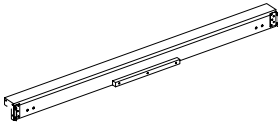

x2

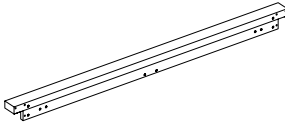


x1


ROVECONCEPTS

HUNTER BED - KING ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE


STEP 1

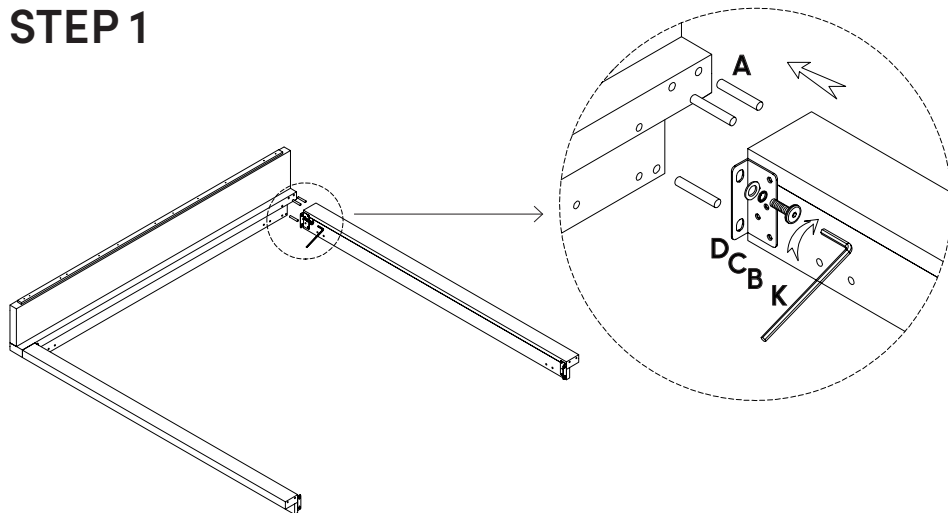


STEP 2

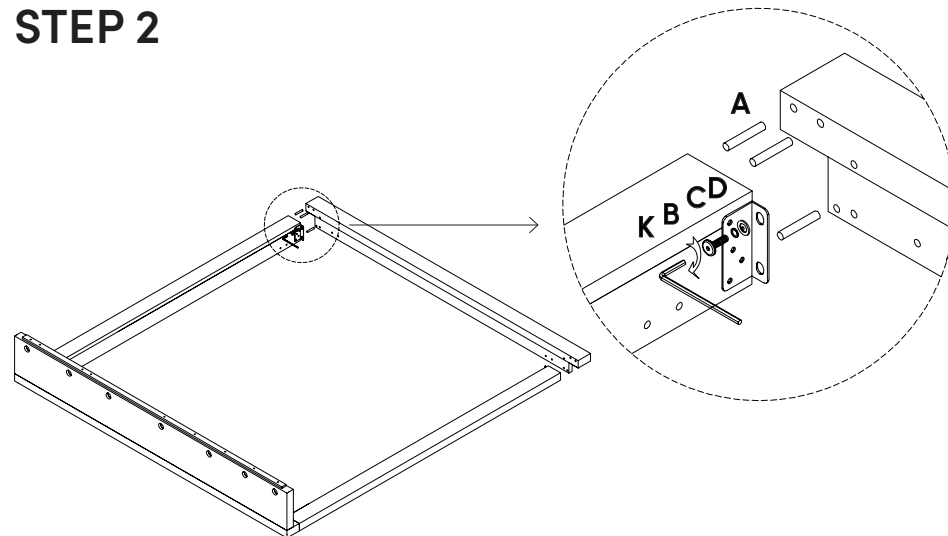

STEP 3

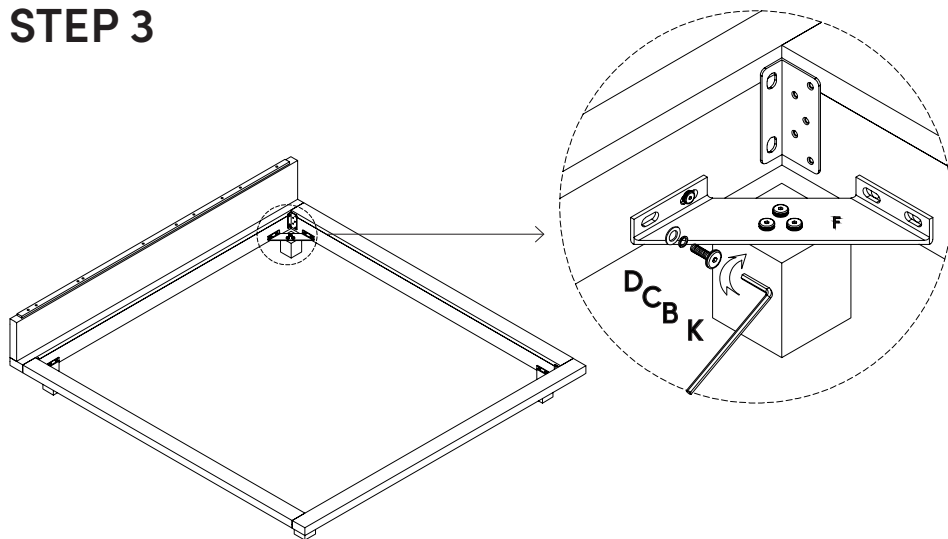


STEP 4

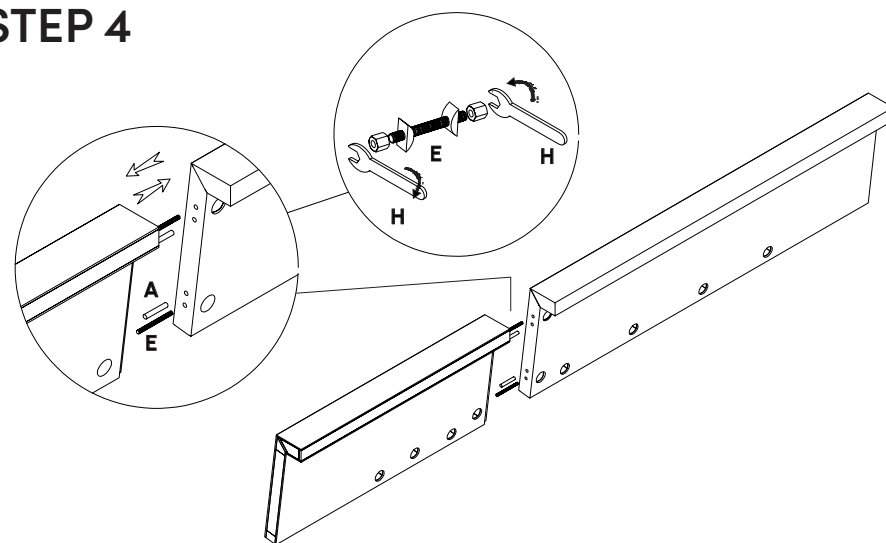


ROVECONCEPTS

HUNTER BED - KING ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE


STEP 5

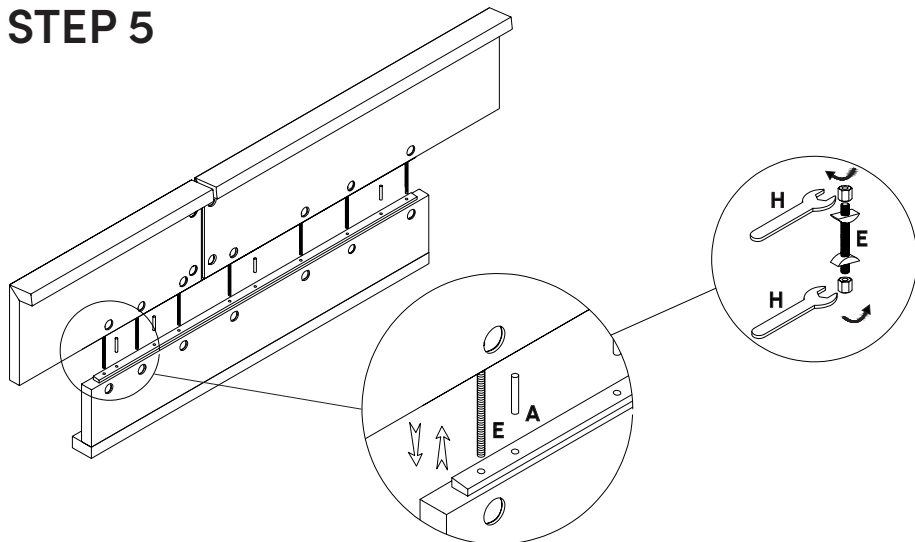


STEP 6

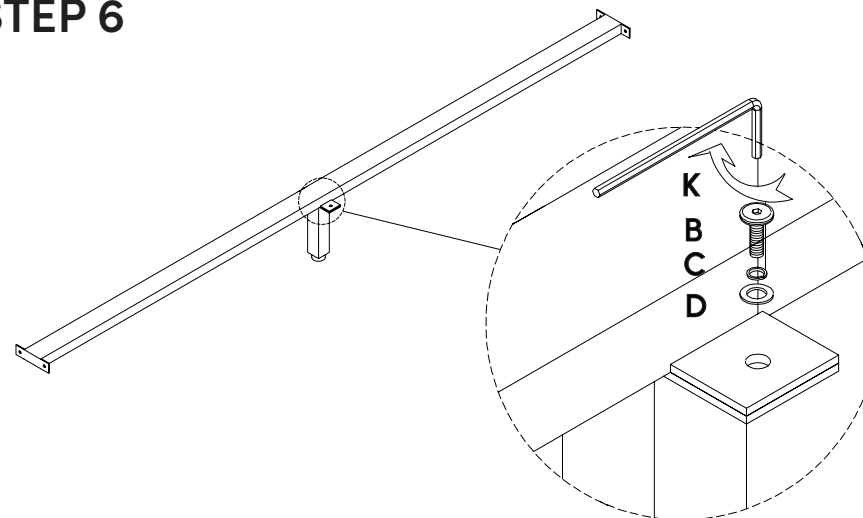

STEP 7

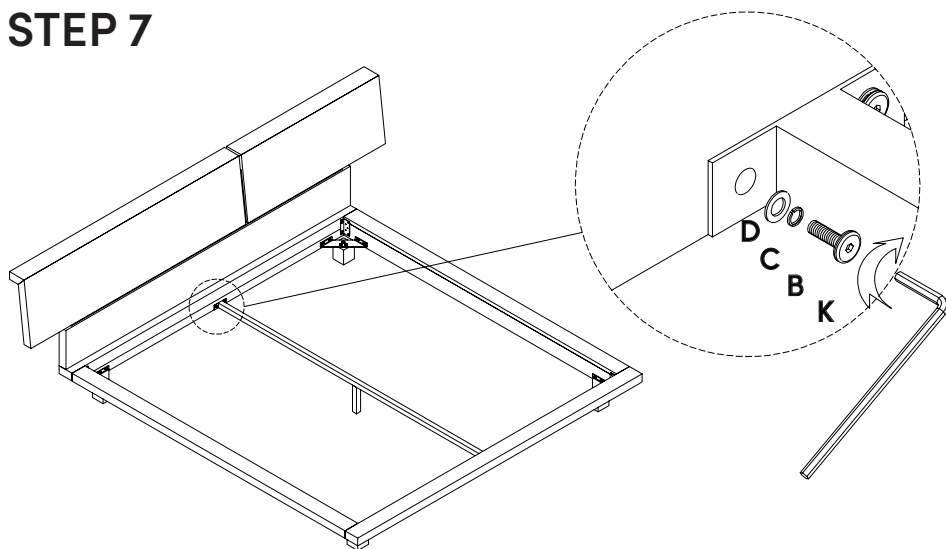


STEP 8

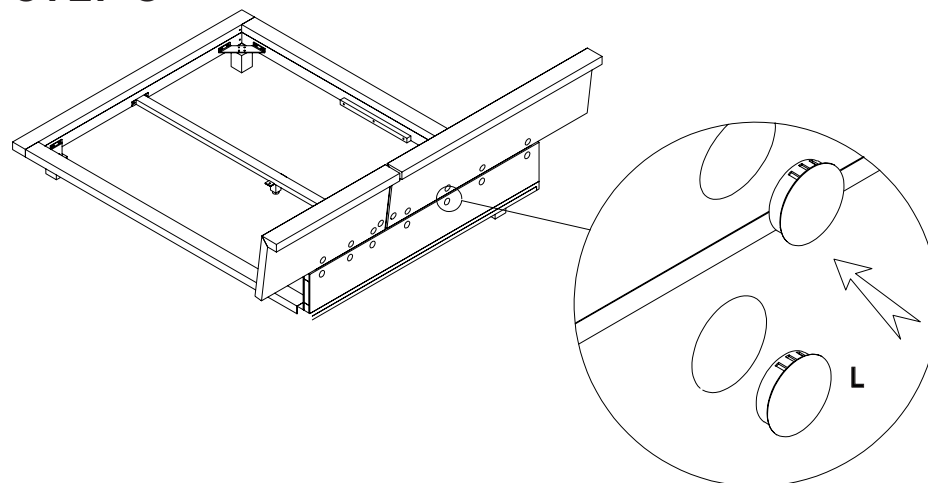

ROVECONCEPTS

HUNTER BED - KING ASSEMBLY INSTRUCTIONS | INSTRUCTIONS DE MONTAGE

STEP 9

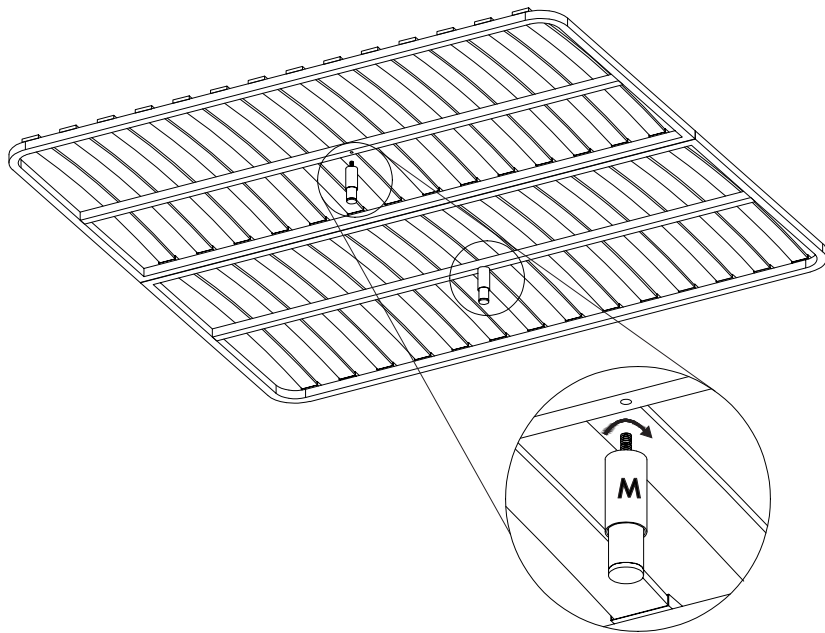

STEP 10

