



ROVECONCEPTS

Refined Luxury Living

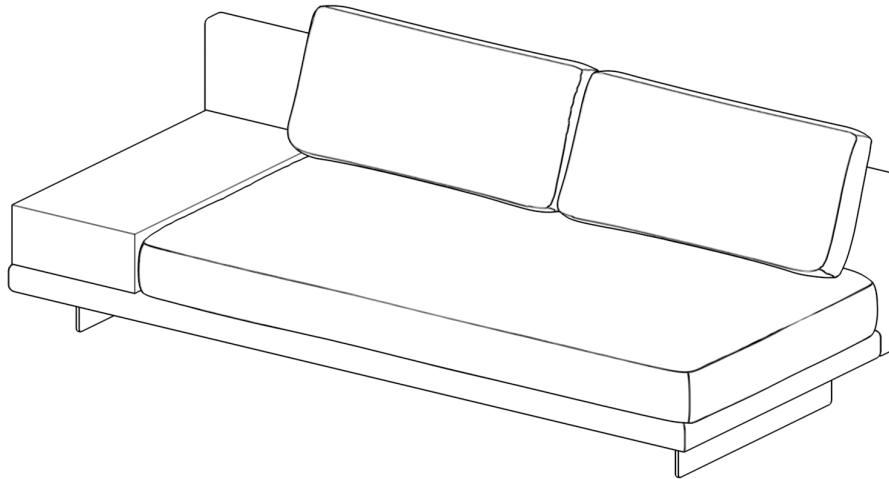

OUTDOOR DRESDEN ARMLESS SOFA ASSEMBLY INSTRUCTIONS

HARDWARE

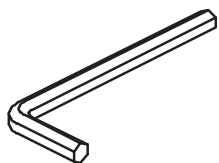

A

x1
M5




B

x8
M8*25



C

x8
Ø17* Ø10*2

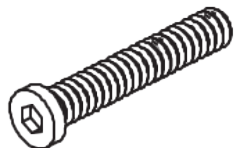


D

x2
M6*120




E

x2
Ø13* Ø6*1

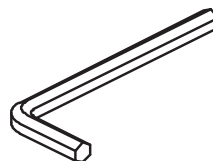

F


x1
M4

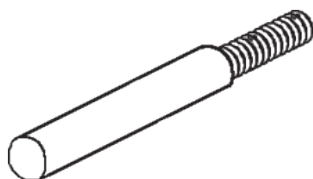

G

x1
Support Leg

STEP 1

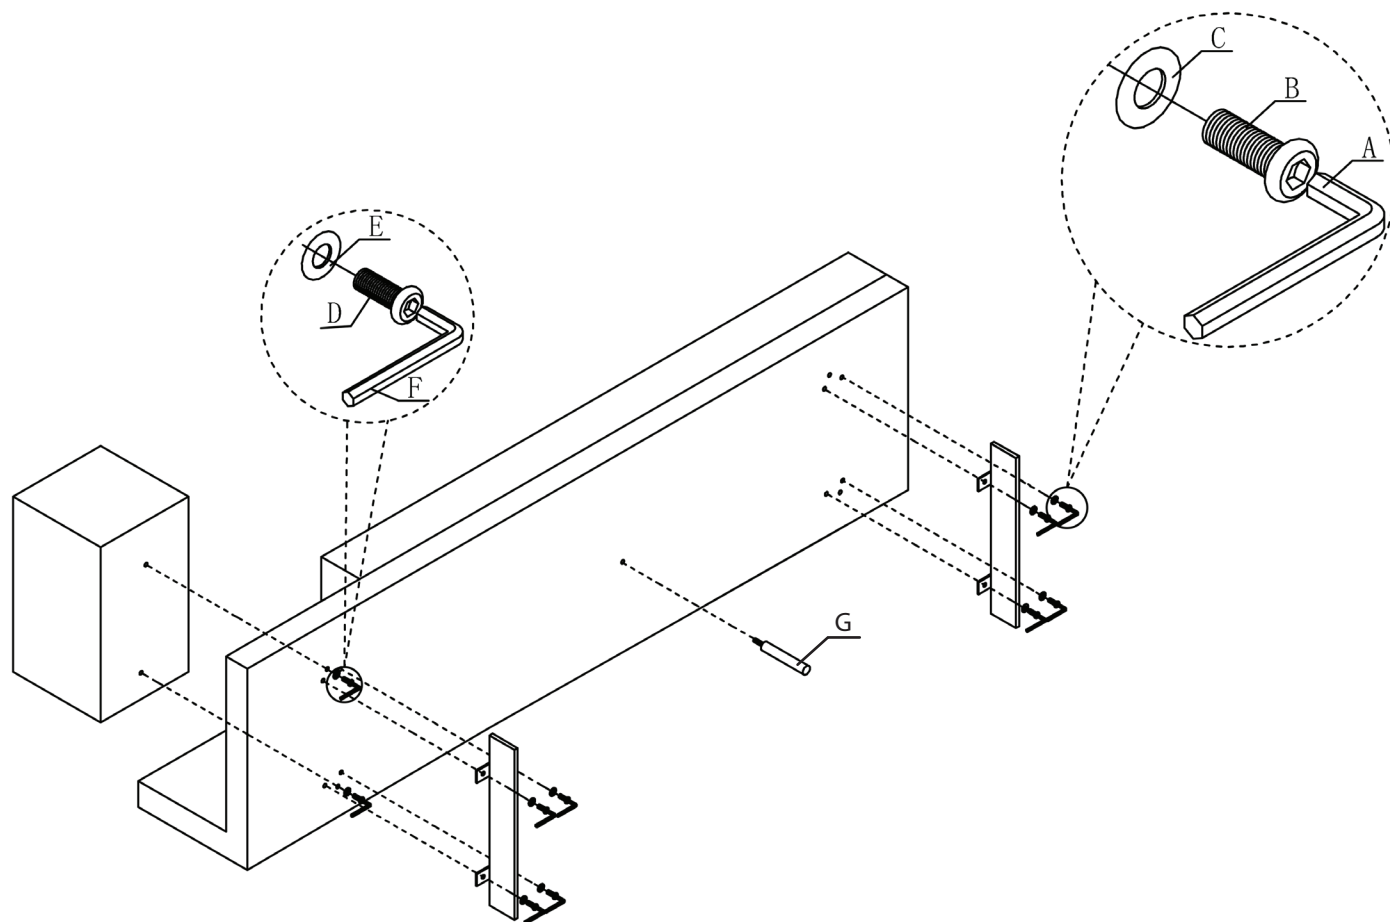

STEP 2

