


ROVECONCEPTS

Refined Luxury Living

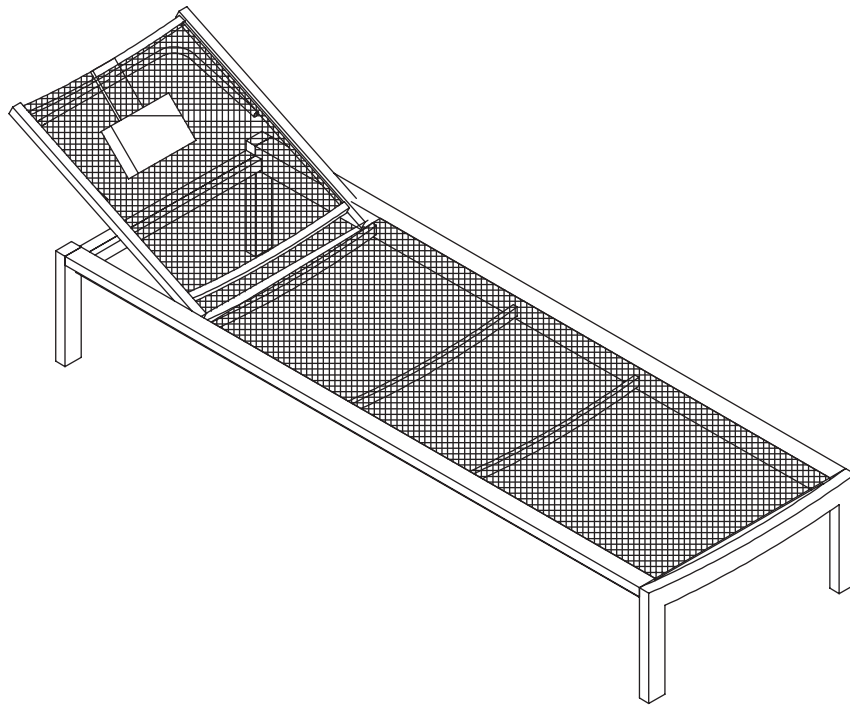

SPENCER OUTDOOR LOUNGER ASSEMBLY INSTRUCTIONS

HARDWARE



A

x1




B

x10
Washer



C

x4
M6*15mm



D

x6
M6*40mm



E


x2
Plastic Washer




F

x10


STEP 1

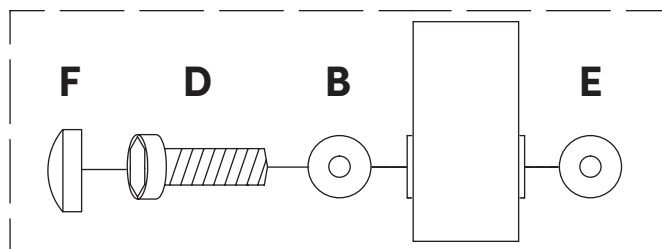

Tighten all screws

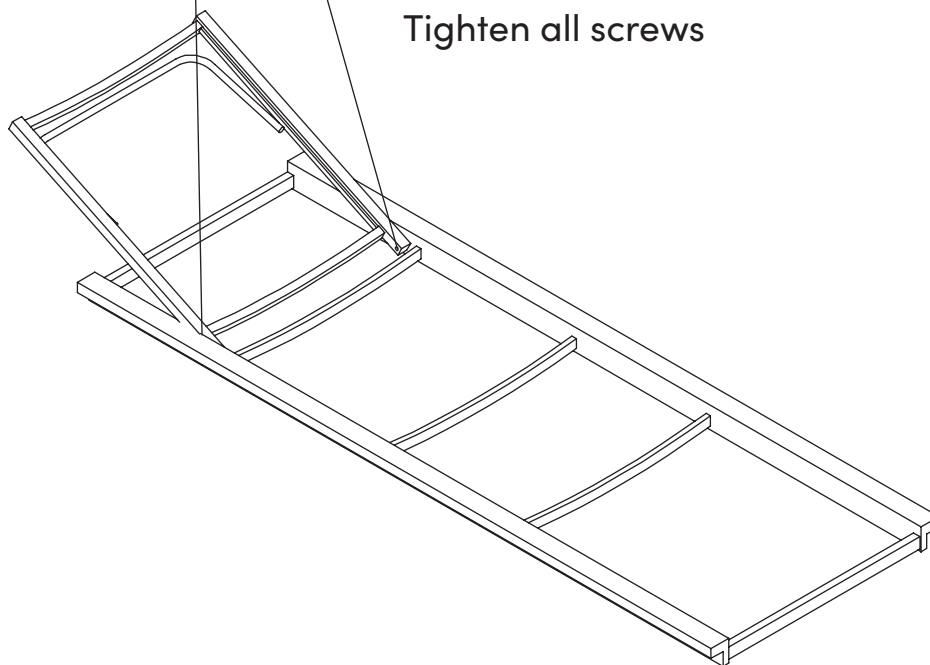


STEP 2

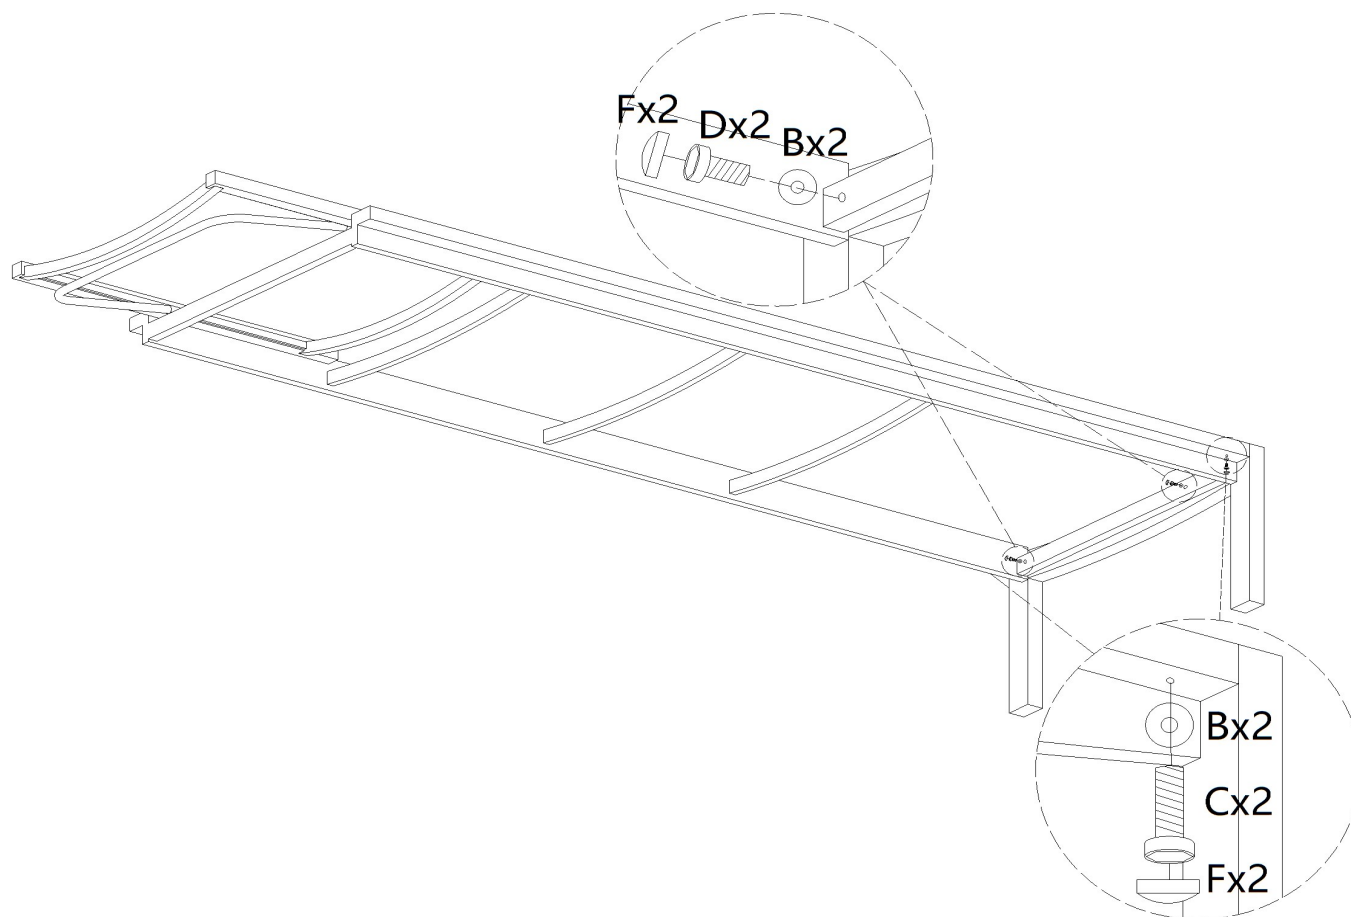

Tighten all screws

STEP 3

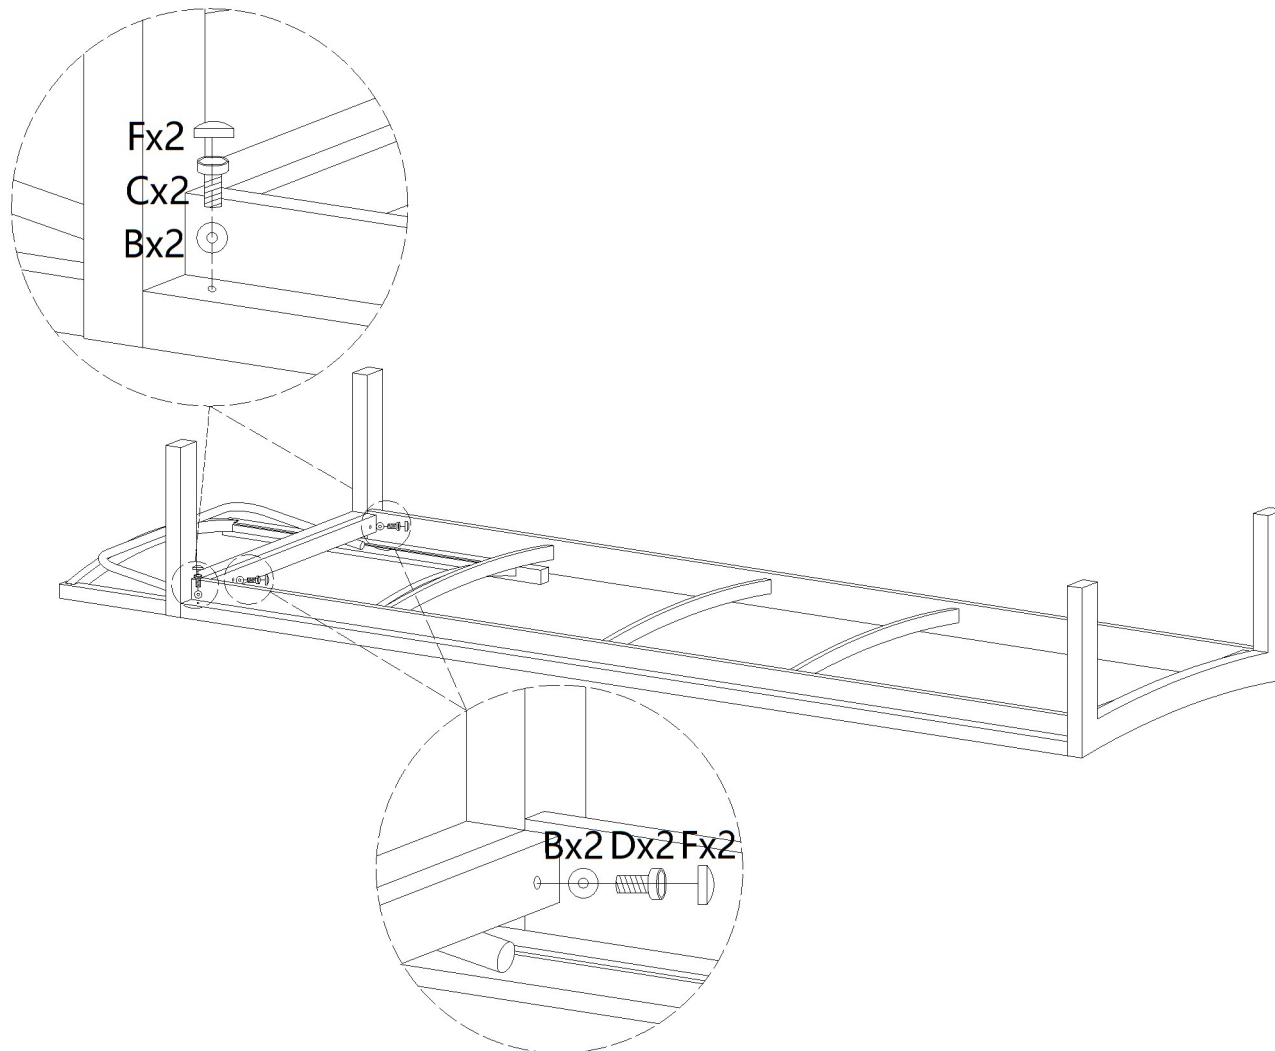

Tighten all screws and finish